

# Care Instructions

## Avoid Hard Knocks

While Pyrex glass is heat strengthened, through a thermal tempering process, to be durable and long-lasting, Pyrex glassware-- any glass products, for that matter--can break if it's dropped, knocked against a hard surface, or struck with a hard utensil—so handle your Pyrex glassware with care. If a piece of Pyrex glassware does become chipped, cracked or scratched, don't use it, as its strength may be compromised and it could break or shatter (even long after a chip or crack appears).

And if you do break a piece of Pyrex glassware, use thick gloves and a great deal of caution cleaning the broken glass, as pieces can be extremely sharp and be widely spread from the point of breakage.

## Easy Care

- Pyrex glassware plastic lids are BPA free. They are safe for use in the microwave and for food storage. Pyrex lids cannot be placed in conventional or convection ovens (because they'll melt), unless specifically noted on the package that they are designed for oven use (as with Pyrex Ultimate Storage silicone and glass lids).
- Pyrex glassware and lids are dishwasher safe, making cleanup easy and carefree. Keep both plastic lids and glassware away from direct heat elements in the dishwasher.
- When washing Pyrex glassware by hand, use non-abrasive cleansers. To remove baked-on foods, soak the dish and use a plastic or nylon cleaning pad if scouring is needed.