

## GOURMET ACCESSORIES

- **ALWAYS WEAR OVEN MITTS** when handling inserts, lid, and pot.
- Be sure the insert is properly aligned (steam should not escape out the sides) and the lid is on correctly.

### Care and Cleaning:

Before the first use, wash in hot soapy water with a sponge or dishcloth. Rinse in hot water and dry thoroughly.

### Cleaning the Stainless Steel Interior:

Immerse in warm water. Use a fine powder cleanser with water to form a paste. Apply paste using a soft cloth. Rub in a circular motion from the center outward. Wash in hot soapy water, dry immediately. **DO NOT USE** oven cleaners or cleansers with chlorine bleach. **DO NOT USE** steel wool.

### Cleaning the Stainless Exterior:

The polished stainless steel exterior of All-Clad Gourmet Accessories requires very little care. It may be polished with one of the available commercial stainless steel cleaners, rubbing in a circular motion. Rinse in lukewarm water. We do not recommend using steel wool, steel scouring pads or harsh detergents. Nylon scrubbing pads are safe to use. You may wash in the dishwasher.

### Cleaning the Stainless Steel Insert:

The stainless steel insert is dishwasher safe. For best results, hand wash immediately after use. Rinse with warm water, then immerse in warm, soapy water and clean with a stiff brush. Rinse with hot water and dry immediately.