

Cleaning modes on your Jetbot Mop

Not only does your Jetbot Mop clean the floors in your home, but it also comes with several cleaning modes to assist you even more. Each unique mode offers effective cleaning cycles and patterns if you're looking to deep clean all your floors, or just need to quickly wipe away a spill. The two sensors located on your Jetbot Mop will turn on when you select a mode (excluding Handy Cleaning) and will help guide it around your home throughout the cycle. You can also use Handy Cleaning mode if you'd like to scrub something yourself.

• Cleaning modes

Note: You do not need to use the remote to activate Manual Cleaning mode.

To begin a cleaning mode, you'll need to connect your Jetbot Mop's remote. Make sure the remote's batteries have been inserted, and then point it at the Jetbot Mop while pressing any of the cycle buttons. You can try out different cleaning modes to find which ones suit your home and floors the best.

- **Auto Cleaning:** Use Auto Cleaning when you're busy with other chores and won't be able to keep an eye on your Jetbot Mop. This mode allows your Jetbot Mop to move all around your floors to clean every area it can reach.
- **Edge Cleaning:** During Edge Cleaning, your Jetbot Mop will sense the corners of obstacles and glide around them, which makes this mode useful in rooms with a lot of furniture.



- **Focus Cleaning:** If you have a specific area on your floor that needs extra attention, you can use Focus Cleaning. Your Jetbot Mop will concentrate on that area until it's completely clean.
- **Intensive Cleaning:** During Intensive Cleaning, the mop pads will rotate faster, allowing your Jetbot Mop to cover more space in less time. You can use this mode when your floors to be wiped clean as soon as possible.
- **Pattern Cleaning:** This mode guides the Jetbot Mop in a preset pattern, so it can clean every inch of your floors without missing a spot. Pattern Cleaning is perfect for making sure every little corner has been cleared of dust or dirt.
- **Step Cleaning:** Your Jetbot Mop will move from side to side during Step Cleaning. It will follow a straight line until it reaches a wall or obstacle, and will then retrace its steps.
- **50 min. Cleaning:** This option activates a 50-minute Auto Cleaning mode. When 50 minutes have passed, your Jetbot Mop will sound an alarm, and you can swap out the mop pads and refill the water supply kits.
- **Handy Cleaning:** This is a manual mode that lets you use the mop to clean up messes yourself. To enable Handy Cleaning, just press the **Operation** button twice on the Jetbot Mop. Then, hold the Jetbot Mop by the handle to clean a surface in your home, such as a window or countertop.