



# Kayak Hanger

## Tools Required for Assembly:


Drill  
1/8" Drill Bit  
Screwdriver

## Parts Included:

2 Eye Bolts  
2 Hanger Straps

### Step 1:

Determine location for the kayak hangers. The eye bolts must be secured into either wall studs or ceiling rafters. Optimally, the kayak will be divided into thirds while in the hanger, so for a 12' long kayak, the eye bolts would be placed approximately 4' apart.

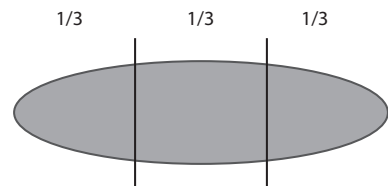

### Step 2:

Ensure that the locations of the eye bolts are high enough off the floor so that the kayak has enough clearance.

### Step 3:

Drill a 1/8" pilot hole for each eye bolt. This will facilitate their installation.

### Step 4:

Install the eye bolts by starting them by hand in the pilot hole and then by placing the screwdriver through the 'eye' and twisting it to install the bolts.

### Step 5:

Insert S-Hook #1 into the eye bolt. (See diagram)

### Step 6:

To suspend the kayak, take S-Hook #2 from behind the kayak, up and around the kayak, and insert it in the loop of webbing below S-Hook #1.

